PROGRAMMING YOUR REMOTE

METHOD A:

- 1. Press and hold **SETUP** button until LED blinks twice.
- 2. Press the TV POWER button.
- 3. Press and hold the **DIGIT KEY** for your TV brand.

DIGIT	TV BRAND
1	Insignia/Dynex
2	LG/Zenith
3	Mitsubishi
4	Panasonic
5	Philips/Magnavox
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

4. Let go of the key when your TV turns off. Setup is complete.2 Blinks = success 1 Long Blink = failure

METHOD B:

- 1. Press and hold **SETUP** button until LED blinks twice.
- 2. Press the **TV POWER** button.
- 3. Press and hold down the **OK/SELECT** button.
- 4. Let go of the **OK/SELECT** button when the TV turns off.

If you are experiencing difficulty setting up your remote, please visit:

www.urcsupport.com/urc_product/royal-urc2060b0

PROGRAMMING YOUR SET TOP BOX

Press and hold the **SETUP** button at the same time as the corresponding **COLORED BUTTON**, listed below, until the **CABLE POWER** button blinks twice. Set up is now complete.

YELLOW (A): Legacy Amino BLUE (B): IS-5112SW RED (C): ADB

GREEN (D): Entone/Amino

*NOTE: The model of your set top box can be found on label, typically located on the bottom of the box. If you are unable to locate the label, and are still unsure of the model, contact our support team at 888.404.4940. We would be happy to help you.



Big Button Royal Remote

